




Industry Leading IoT Sensors & Remote Monitoring


Quick Start Guide for PoE•X Sensors



Use the QR code to the right of the phone image above to download the iMonnit app. Alternatively, you can search for "iMonnit" in Google Play or the Apple Store.

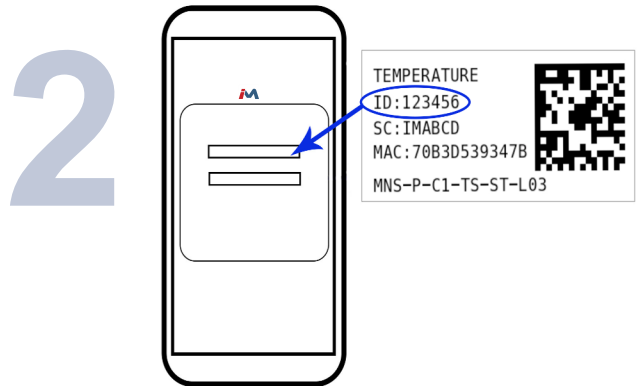


Follow the in-app instructions to add devices to your account.

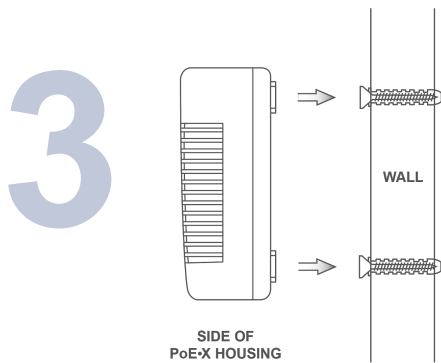


Mount your sensor to a wall with the supplied screws from the accessories kit*. Use the mounting template shown at the right of this page to drill for your wall anchors. Wall anchors are drilled at 3/16".

*Accessories kit includes; 2 screws, 2 wall anchors, 4 rubber feet, and a CAT5 cable.

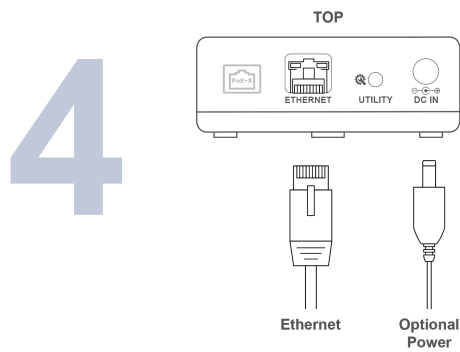

 Connect the Ethernet cable from your PoE (Power over Ethernet) switch to the Monnit sensor. If your facility does not support PoE, you will also need to connect the optional power supply (see figure above).



For more detailed instructions, documentation, how-to guides and video demonstrations on using Monnit wireless sensors, wireless gateways and iMonnit software, visit our support page at monnit.com/support/.



Monnit Corporation

3400 South West Temple • Salt Lake City, UT 84115 • 801-561-5555
www.monnit.com